



SILICONE EDGE FABRIC - INSTALACIÓN


APPLY GRAPHIC

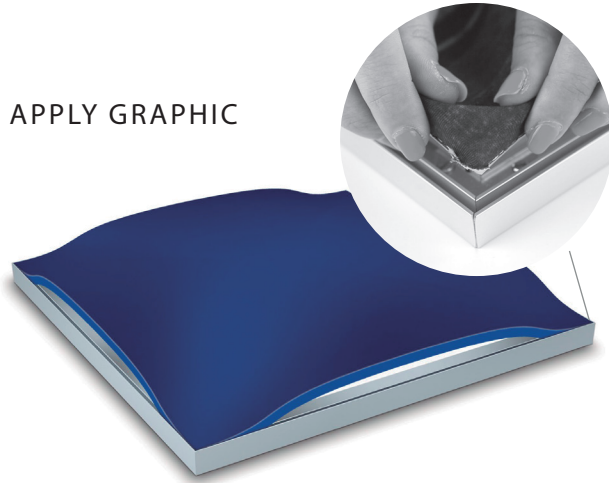

1 Start by folding one corner edge of the graphic so the silicone strip points down and the fabric wraps over it.

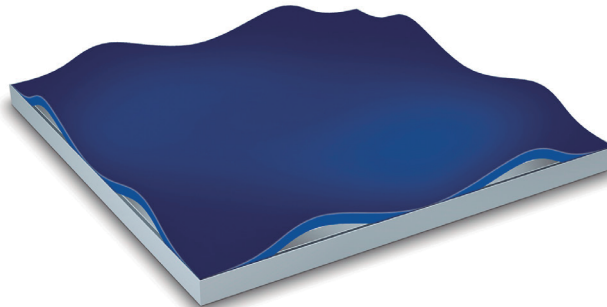

2 Insert one corner in and then the opposite diagonal corner. Then insert the next corner followed by the last diagonal corner.

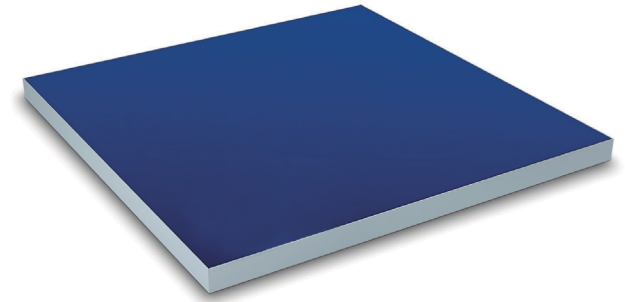

3 Work from the middle on each side out, to the ends until the graphic is evenly taut in the frame.

CARE INSTRUCTIONS



Fabric graphics can be machine washed in cold water on a delicate cycle, or dry-cleaned if preferred.



Woolite detergent is recommended for washing Fabric.



Once wash is complete, tumble dry on low heat/delicate setting.



Any wrinkles should subside after a day in the frame. A fabric steamer can also be used if needed. **DO NOT IRON.**

• **SEG**
Intercreacion